


## Wireless PoolTunes™ Speaker

### Operating Instructions

Printed in PRC

### PoolTunes™ Speaker Location of buttons and indicators

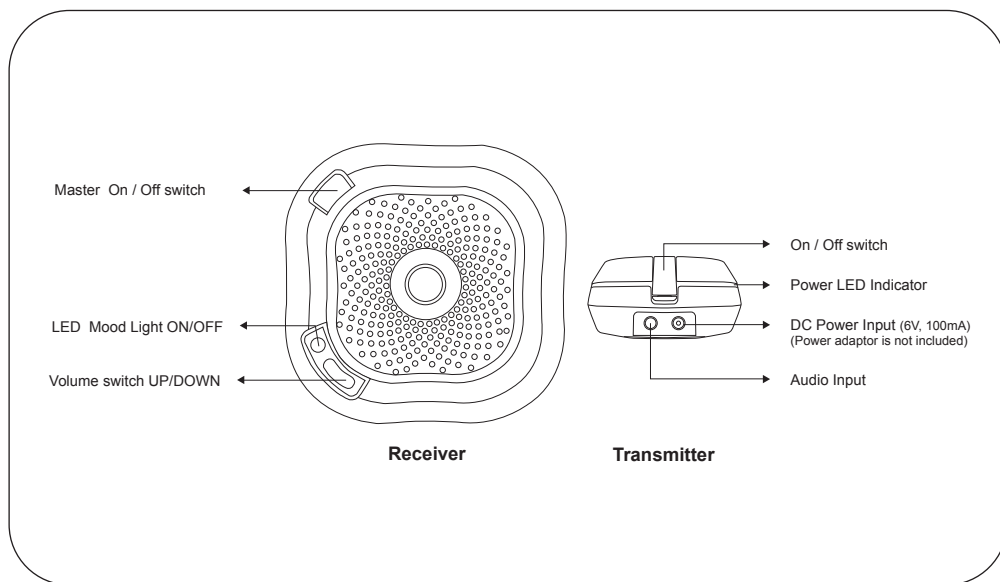

### PoolTunes™ Speaker Safety Instructions

#### Please Read the Following Operation Precautions Before Use

- Read Instructions – All safety and operating instructions should be read thoroughly before attempting to operate this audio system.
- Retain instructions for future reference.
- Heed warnings – All warnings on this audio system and in the operating instructions should be adhered to.
- Follow instructions – All operating and use instructions should be followed.
- TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY OF THE SCREWS AND TRY TO DISASSEMBLE THE PoolTunes™ SPEAKER. THERE ARE NO SERVICEABLE PARTS INSIDE THIS UNIT.
- Do not expose the PoolTunes™ Speaker to solvent.
- Do not expose the PoolTunes™ Speaker to temperature or humidity extremes, direct sunlight, excessive dust, or vibrations.
- Place the PoolTunes™ Speaker on a stable, level surface. Do not drop, apply excessive force to the controls, or put heavy objects on top of the PoolTunes™ Speaker
- If cleaning is required, use a soft dry cloth. If necessary, use a damp cloth without any solvents.
- In order to protect the PoolTunes™ Speaker, avoid microphone feedback, continuous output from electronic musical instruments, or distorted output from any signal source.
- Do not place the PoolTunes™ Speaker close to fluorescent light sources, or neon light fixtures.
- WARNING: To reduce the risk of fire or electric shock, do not expose the PoolTunes™ Speaker to rain or moisture for long period without attention

### PoolTunes™ Speaker Easy Setup Guide – Battery Installation

<p><b>Step1.</b> Content in the Package:</p> <ul style="list-style-type: none"> <li>1 x PoolTunes™ Speaker</li> <li>1 x Transmitter</li> <li>1 x Audio Input Cable</li> <li>1 x Instruction Manual</li> </ul>	<p><b>Step2.</b> Battery installation for PoolTunes™ Speaker</p> <ul style="list-style-type: none"> <li>- Turn the lower LED dome off</li> <li>- Unscrew the battery cover locking screws</li> <li>- Install 4 pcs fresh "C" size batteries</li> </ul>	<p><b>Step3.</b> Battery installation for transmitter:</p> <ul style="list-style-type: none"> <li>- Unscrew the battery cover locking screws</li> <li>- Install 4pcs fresh "AAA" size batteries</li> </ul>

### PoolTunes™ Speaker Easy Setup Guide - Wireless Audio Operation

<p><b>Step4.</b> Connect your music:</p> <ul style="list-style-type: none"> <li>- use the provided audio cable to plug into the audio input socket at the back of the transmitter</li> <li>- connect the other end of the audio cable to your music source</li> <li>- Set the volume output from your music source to 75-80% for best results</li> </ul>	<p><b>Step5.</b> Turn the transmitter ON:</p> <ul style="list-style-type: none"> <li>- flip the antenna to upright position</li> <li>- the power indicator ring will be illuminated</li> <li>- extend the telescopic antenna to maximum length for best transmission</li> </ul>	<p><b>Step6.</b> Turn the PoolTunes™ Speaker</p> <ul style="list-style-type: none"> <li>- Press the Master ON/OFF switch</li> <li>- the power indicator ring will be illuminated</li> <li>- adjust the volume level by using the volume UP/DOWN button to your desired level</li> </ul>

### PoolTunes™ Speaker Troubleshooting

Symptom	Possible Problem	Solution
Power LED does not light up	<ul style="list-style-type: none"> <li>• No Power to the system</li> <li>• Batteries are weak</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the batteries are installed correctly</li> <li>• Replace batteries</li> </ul>
No Sound	<ul style="list-style-type: none"> <li>• Transmitter is not functioning properly</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the transmitter is functioning</li> <li>• Switch both the PoolTunes™ Speaker and Transmitter off then turn them back on again (reboot).</li> <li>• Make sure the audio cable is connected securely to the music source</li> </ul>
Wireless Interference	<ul style="list-style-type: none"> <li>• Signals between transmitter and receiver can be influenced by other 49MHz wireless devices</li> </ul>	<ul style="list-style-type: none"> <li>• Move the transmitter and receiver away from other wireless devices</li> <li>• Make sure there are no other wireless devices operating in between the transmitter and receiver</li> </ul>

### PoolTunes™ Speaker Easy Setup Guide - LED Mood Light

<p><b>Step7.</b> LED Mood Light: - Turn the LED Mood Light on, by pressing the Mood Light ON/OFF button next to the Volume UP/DOWN</p>

### PoolTunes™ Speaker Specifications

Transmit Frequency: 49.68MHz  
 Number of Channels: 1Ch  
 Modulation: Frequency Modulation  
 Output rating: 3 Wrms x 1 (Class AB - Audio Amplifier)  
 Speaker: 3" Speaker  
 Power Supply: 4 x "C" size ( PoolTunes™ Speaker ), 4 x "AAA" size (Transmitter)  
 Transmission Range: 35' (Outdoor, LoS)  
 Dimension: 6.8" x 6.8" x 6.25" ( PoolTunes™ Speaker ), 3.5" x 3.5" x 1.65" (Transmitter)  
 Weight: 1.4 lbs. ( PoolTunes™ Speaker w/o battery), .19 lbs. (Transmitter w/o battery)

### FCC Information

- This device complies with part 15 if the FCC Rules.
- Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference,  
 (2) This device must accept any interference received, including interference that may cause undesired operation.

### PoolTunes™ Speaker Disclaimer

Normal operation should be possible within a distance of 35 feet (Outdoor, LoS), but the presence of obstacles in between the transmitter and receiver may result in reception problems. Such obstacles can be anything, but not limited to, certain types of furniture, constructions, wall materials, etc... The radio waves may be disrupted by other electrical appliances.